

PA2 SF CENTAURO SF & PRIMAVERA SF seeding bars

Seeding & Planting PM, May 2020





- Tractor connection: **FRONT 3-POINTS HITCH**
- Product distribution: **VOLUMETRIC**
- Product transport: **PNEUMATIC**
- Doser trasmission: ELECTRIC SOTRONIC
- Management system: **GENIUS MASTER**
- Comunication:



Model	Dosers (n°)	Blowers (n°)	Transport lines (n°)	Hopper capacity (I)	Hopper compartments (n°)	Width (cm)
PA1	1	1	1	1.100	1	250
PA2 SF	2	2	2	2.000 (1.200 S + 800 F)	2	250







Double blower


PA2 SF has two independent blowers.

Each hopper compartment and doser with them blower.

- This feature allows:
 - high product dosing also with high working speed (10-15 km/h);
 - **independent air calibration** depending on the product weight.
- The two blower has **tractor-dependent hydraulic drive**.

Pneumatic transport capacity to the 6-m seeding bar:


- 10 Km/h (250 Kg/Ha seed and 200 Kg/Ha fertilizer)
- 12 Km/h (200 Kg/Ha seed and 150 Kg/Ha fertilizer)

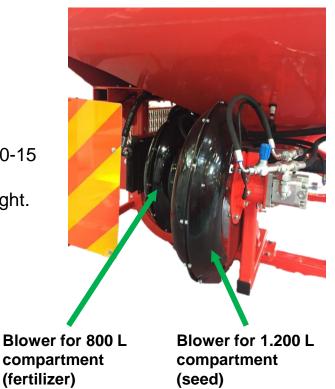




Staggered hopper breach

- Compared to the current version of PA2, the breach of the product from the hopper to the dosers are staggered.
- Feature which allows for a dosers positioning able to guarantee the products fall directly inside the transport tubes.

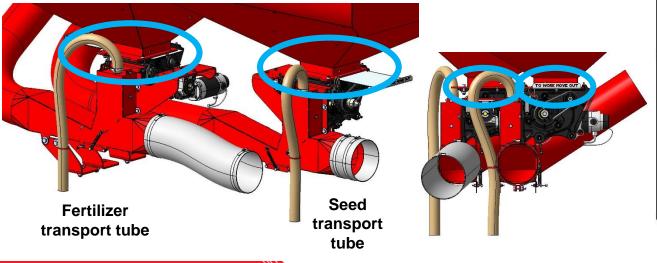


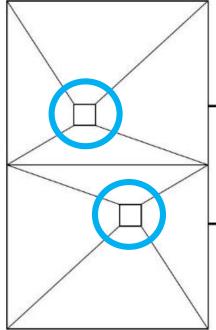




Guaranteed distribution on strong slopes


- Between the doser and the transport tube there is a slide.
- It guarantees the product descent even in conditions of machine use with high lateral slopes.

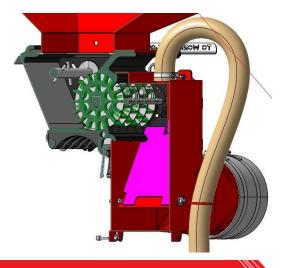

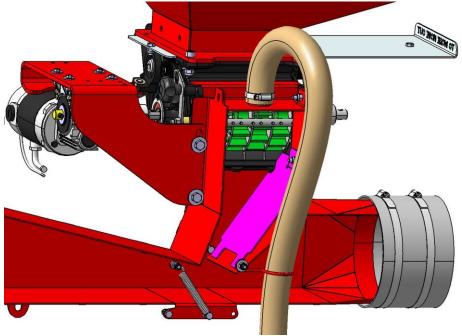




Ballast kit

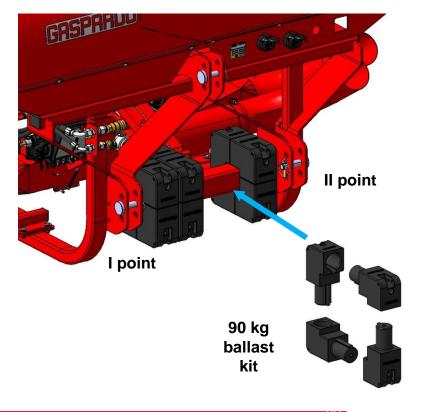


- The 90 kg ballast kit can be applied between the 1st and 2nd point attachments.
- At most it is possible to apply 4 kits (4 kits * 90 kg = 360 kg)
- Each kit consists of 4 modules, in order to simplify the assembly/disassembly operation.

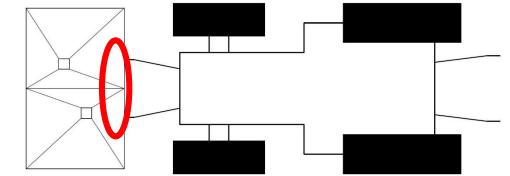



Cameras kit

N.2 lateral cameras kit with monitor for the tractor cabin.

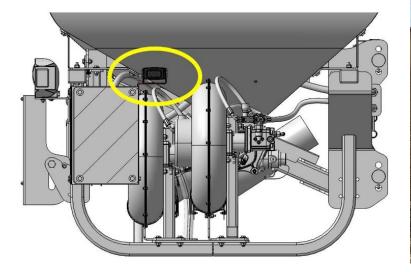





PA2 SF allows double distribution of seed and fertilizer with the following seeding bar:

CENTAURO SF seeding bar (2 ranks) PRIMAVERA SF seeding bar (4 ranks)






CENTAURO SF seeding bar

- Compatible only with AQUILA and TORO power harrows
- 2-ranks seeding bar



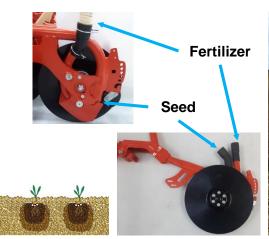



Model	Working width (cm)	Units (n°)	Row spacing (cm)	Seeding coulter	Transport width (cm)
CENTAURO SF 500/34R - single disc	500	34	15,0	VORTEX SF	255
CENTAURO SF 500/34R - double disc	500	34	15,0	COREX PLUS SF	255
CENTAURO SF 500/40R - single disc	500	40	12,5	VORTEX SF	255
CENTAURO SF 500/40R - double disc	500	40	12,5	COREX PLUS SF	255
CENTAURO SF 600/40R - single disc	600	40	15,0	VORTEX SF	255
CENTAURO SF 600/40R - double disc	600	40	15,0	COREX PLUS SF	255
CENTAURO SF 600/48R - single disc	600	48	12,5	VORTEX SF	255
CENTAURO SF 600/48R - double disc	600	48	12,5	COREX PLUS SF	255



PRIMAVERA SF seeding bar

- Available only with straight suffolk coulter
- 4-ranks seeding bar






Model	Working width (cm)	Units (n°)	Row spacing (cm)	Seeding coulter	Transport width (cm)
PRIMAVERA SF seeding bar 600/40R – suffolk	600	40	15,0	Straight suffolk	300
PRIMAVERA SF seeding bar 600/48R – suffolk	600	48	12,5	Straight suffolk	300



Seeding bar configurations





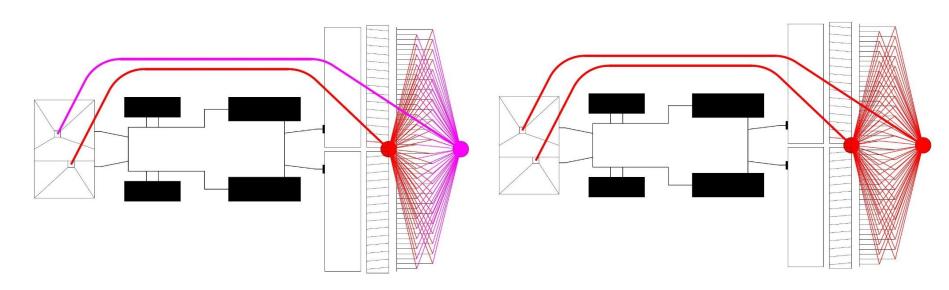



ISOBUS «GENIUS MASTER»

BASIC FUNCTIONS

- Connection to ISOBUS implements (UT)
- Seeding rate setting
- Quick rate variation (%)
- Seed delivery cut-off
- Implement hydraulic functions
- Seeding test
- Manual section control
- Seeding alarms
- Tramline
- Pre-start / Pre-stop
- Job value visualization:
 - Blower regime
 - Working speed
 - Hectar couter
 - Seeding rate

GENIUS MASTER system provides PA2 SF with wide seeding functions range.

AEF Certi			AUX-N AUX-N TC-SC TC-SC
UT	TC-BAS	TC-GEO	TC-SC



ADVANCED FUNCTIONS (DGPS-RTK necessary)

- Task Controller (Precision Farming):
 - Prescription maps importing (TC-BAS)
 - Job documentations exporting (TC-BAS)
 - Automatic section control (TC-SC)
 - Automatic variable rate (TC-GEO)



ISOBUS «GENIUS MASTER»

ISOBUS tractors with own Virtual Terminal





 $\overline{\mathbf{V}}$

Not necessary another Virtual Terminal for connection tractor-drill.

Necessary check if tractor has all functions available for Precision Farming (Task Controller).

No-ISOBUS tractors without own Virtual Terminal



MASCHIO GASPARDO provides a kit for connection between tractor and planter, which includes:

- ISOBUS Virtual Terminal
- cable for planter-terminal connection
- cable for tractor battery







TERA 7



TERA 7

- 7" color touchscreen display
- Menù with various languages
- ISOBUS functions
 - Connection to ISOBUS implements (UT)
- Bracket
- GENIUS MASTER update function
- USB port (only for GENIUS MASTER updating)









TOUCH 800

- **8**" color touchscreen display
- Menù with various languages
- ISOBUS functions
 - Connections to ISOBUS implements (UT)
 - Prescription maps importing (TC-BAS)
 - Job documentation exporting (TC-BAS)
 - Automatic section control (TC-SC)
 - Automatic variable rate (TC-GEO)
- Bracket
- USB device
- USB port
- Track Leader (parallel guidance)
- Optional functions (contact MASCHIO GASPARDO for availability)
 - Multicontrol (independent variable rate for 2 different products)



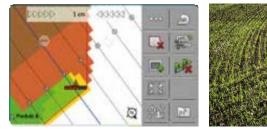


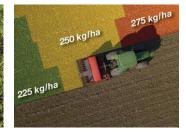



Precision Farming

Thanks to **GENIUS MASTER**, PA2 SF takes advantages of ISOBUS functionalities for **Precision Farming**.

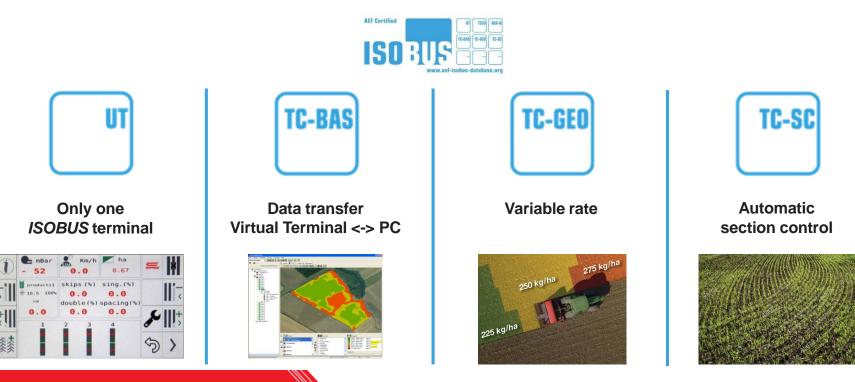



MASCHIO GASPARDO S.p.A.

Sede legale e stabilimento produttivo Via Marcello, 73 - 35011 Campodarsego (PADOVA) - Italy Tel. +39 049 9289810 - Fax +39 049 9289900

info@maschio.com - www.maschio.com